



Coating Thickness Gauge

Fast reading rate of 70+ per minute, 140+ per minute with

Ultra/Scan Probe

The Elcometer 456 sets new standards; providing reliable and accurate coating thickness measurements; helping you to become more efficient.

Specialised probes to meet a wide range of applications, see page 11

USB and Bluetooth® data output to ElcoMaster® software suite of products

Secure probe connection for improved durability





* Elcometer 456 gauges are supplied with a one year warranty against manufacturing defects. The warranty can be extended to two years via www.elcometer.com

elcometer



Coating Thickness Gauge

Dry Film Thickness - Digital

Elcometer 456

Stores up to 150,000 readings in alpha numeric batches

Integral and Separate gauges to measure coatings up to 31mm (1220mils)

Scratch and solvent resistant screen

Auto rotating display with tap awake feature

Large buttons with positive feedback

Large easy to read colour display



Dust and waterproof rugged design equivalent to IP64




Large easy to read measurements in Metric and Imperial units



View up to 8 user selectable statistics on-screen



On-screen trend graph displaying last 20 measurement values

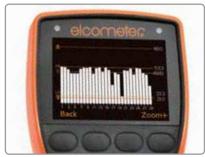

Individual batch readings can be reviewed numerically or graphically





😵 Bluetooth®

compatible with ElcoMaster.

Elcometer 456 Models S & T: Made for iPhone 6 Plus, iPhone 6, iPhone 5c, iPhone 5c, iPhone 5c, iPhone 4c, iPhone 4c, iPad Air 2, iPad Mini 3, iPad Air, iPad Mini 2, iPad (3rd and 4th generation), iPad Mini, iPad 2, and iPod touch (4th and 5th generation). "Made for iPod," "Made for iPhone," and "Made for iPad" mean that an electronic accessory has been designed to connect specifically to iPod, iPhone, or iPad, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod, iPhone, or iPad may affect wireless performance.



Bigfoot[™] integral probe for accurate and repeatable measurements



Ergonomic design for comfort during continuous use



2.4" colour screen provides enhanced reading visibility at all angles

Coating Thickness Gauge

Easy

- Large buttons ideal for gloved hands
- Easy to use menus in multiple languages
- · High contrast colour LCD with auto rotate
- High and low reading limit indicators
- · Factory calibrated for immediate use

Accurate

- Measurement capability to ±1%
- Can be used in accordance with National & International Standards
- Temperature stable measurements
- · Increased reading resolution for thin coatings
- Measures accurately on smooth, rough, thin and curved surfaces

Reliable


- Repeatable and reproducible
- 2 year gauge warranty*

elcometer

- Supplied with fully traceable test certificates
- Batch date and time stamp facility

STANDARDS:

AS 2331.1.4, AS 3894.3-B, AS/NZS 1580.108.1, ASTM B 499, ASTM D 1186-B, ASTM D 1400, ASTM D 7091, ASTM E 376, ASTM G 12, BS 3900-C5-6B, BS 3900-C5-6A, BS 5411-11, BS 5411-3, BS 5599, DIN 50981, DIN 50984, ECCA T1, EN 13523-1, IMO MSC.215(82), IMO MSC.244 (83), ISO 1461, ISO 19840, ISO 2063, ISO 2360, ISO 2808-6A, ISO 2808-6B, ISO 2808-7C, ISO 2808-7D, ISO 2808-12, JIS K 5600-1-7, NF T30-124, SS 184159, SSPC PA 2, US Navy PPI 63101-000, US Navy NSI 009-32





Coating Thickness Gauge

Rugged

- Sealed, heavy duty and impact resistant
- Dust and waterproof equivalent to IP64
- Scratch and solvent resistant display
- Durable gauge and probe construction
- Suitable for use in harsh environments

Efficient

- Fast reading rate of 70+ per minute, 140+ per minute with Ultra/Scan Probe
- Multiple calibration memories
- Alpha numeric batch identification
- User selectable calibration methods
- Compatible with ElcoMaster[®] and ElcoMaster[®] Mobile App

Powerful

- Wide range of interchangeable probes
- USB and Bluetooth[®] data output to iPhone[†] or Android[™] devices
- Stores up to 150,000 readings in 2,500 batches
- Measures up to 31mm (1220mils) of coating on metal substrates



Elcometer 456













[†]Compatible with iPod, iPhone and iPad.

Elcometer 456 Models S & T: Made for iPhone 6 Plus, iPhone 6, iPhone 5, iPhone 5, iPhone 5, iPhone 4, iPad Air 2, iPad mini 3, iPad Air, iPad mini 2, iPad (3rd and 4th generation), iPad mini, iPad 2, and iPod touch (4th and 5th generation). "Made for iPod, "Made for iPad" mean that an electronic accessory has been designed to connect specifically to iPod, iPhone," and "Made for iPad" mean that an electronic accessory has been designed to connect specifically to iPod, iPhone, or iPad, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod, iPhone, or iPad may affect wireless performance.



Coating Thickness Gauge

Scan Mode

When the Scan Mode* is selected users can slide the Ultra/Scan probe over the entire surface area. As the probe is lifted off the surface the gauge displays the average coating thickness value, the highest thickness and the lowest thickness values. Each set of three readings (average, high and low) can be displayed on the run graph and stored into the memory.


During each scan the Elcometer 456 displays the live thickness reading together with an analogue bar graph which graphically indicates the thickness relative to both the nominal thickness and any user-defined limits.



Scan Mode* stores the average, highest and lowest readings over a test area



During a scan the live reading together with an analogue bar graph is displayed

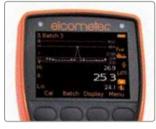

The Run Chart displays the average thickness as well as the highest and lowest readings for each scan




Auto Repeat Mode

When the Ultra/Scan Probe is slid over the coated surface in Auto Repeat Mode*, a reading is taken approximately every half a second. Each individual reading is stored into the memory.

With a reading rate in excess of 140 readings per minute the Auto Repeat Mode can significantly speed up the inspection of large coated areas.



Auto Repeat Mode* measures and stores into memory over 140 individual readings per minute

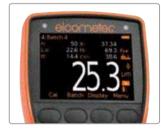

The gauge updates and displays the statistical values as each individual reading is taken



The Run Chart displays each individual reading allowing the user to identify any significant trends

* Scan and Auto Repeat Modes require an Elcometer 456 Model T gauge with Ultra/Scan Probe.



Coating Thickness Gauge

Ultra/Scan Probe

Featuring a highly durable 'snap on' replaceable probe cap, the Elcometer 456 Ultra/Scan Probe is a revolutionary design which allows users to take individual readings or rapidly scan large surface areas - without damaging the probe or the coating.

When used in conjunction with the Elcometer 456 Scan or Auto Repeat Modes* the Ultra/Scan Probe enables users to significantly reduce inspection times without affecting accuracy.

The Ultra/Scan Probe uses the Elcometer 456's patented offset feature⁺, ensuring that any cap wear during use[#] is incorporated within the calibration process. The gauge even informs the user when to replace the cap.


Counted Average Mode

The Elcometer 456 Model S and Model T are supplied with the Counted Average Mode. Once the user has defined the number of individual gauge readings to be taken within a spot measurement, the gauge stores the average of the individual gauge readings into the memory.

Fixed Batch Sizes

The Fixed Batch Size feature within the Elcometer 456 Model T allows users to define the maximum number of readings in each batch. Once the maximum number of readings has been reached the gauge automatically opens up a new batch which is linked to the previous batch (name-1, name-2, etc.).

The Ultra/Scan Probe with replaceable end caps for increased durability

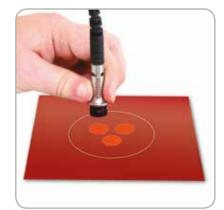

Counted Average and Fixed Batch Sizes can be used with all Elcometer 456 probes

Working with Standards and Test Methods

International Standards and test methods often describe the number of individual gauge readings to be taken in a spot measurement and/or the number of spot measurements required over a defined surface area.

SSPC PA2 requires a minimum of three gauge readings to be taken per spot measurement and five spot measurements over $10m^2$ (~ $100ft^2$).

The Elcometer 456 Model S or Model T can be set with a counted average of three and a fixed batch size of five to meet these requirements. Each batch defines an area of measurement.

When the Ultra/Scan Probe is connected to the Elcometer 456 Model T with Auto Repeat Mode selected, SSPC PA2 (or similar test methods) can be completed more than 40% faster.





+ Patent Number US6243661

^{*} Scan and Auto Repeat Modes require an Elcometer 456 Model T gauge with Ultra/Scan Probe.

[#] When tested on smooth surfaces probe end caps have been scanned in excess of 50km (30 miles).

Dry Film Thickness - Digital

Elcometer 456

Coating Thickness Gauge

Fast, accurate reading rate; 70+ readings per minute Image: Comparison of the comparison of	Product Features	Standard 🗆 Optional		
Repeatable & reproducible measurements Image: Comparison of the second seco		Model B	Model S	Model T
Repeatable & reproducible measurements • Easy to use menu structure; in 30+ languages • Drugh, impact, waterproof & dust resistant; equivalent to IP64 • Bright colour screen; with permanent back light • Scratch & solvent resistant display; 2.4" (6cm) TFT • Large positive feedback buttons • USB power supply; via PC • Test certificate • 2 year gauge warranty* • Automatic rotating display; 0", 90", 180" & 270" • Antomatic rotating display; 0", 90", 180" & 270" • Automatic rotating display; 0", 90", 180" & 270" • Automatic rotating display; 0", 90", 180" & 270" • Automatic rotating display; 0", 90", 180" & 270" • Automatic rotating display; 0", 90", 180" & 270" • Automatic rotating display; 0", 90", 180" & 270" • Cauge software updates'; via ElcoMaster® software • Data output • • USB; to computer • • Bluetooth®; to computer, Android" & IOS* devices • • Nons creen statistics • • • Number of readings; n<	Fast, accurate reading rate; 70+ readings per minute			
Easy to use menu structure; in 30+ languages Tough, impact, waterproof & dust resistant; equivalent to IP64 Tough, impact, waterproof & dust resistant; equivalent to IP64 Torgh, impact, waterproof & dust resistant kight Scratch & solvent resistant display; 2.4" (6cm) TFT Tould Scratch & solvent resistant display; 2.4" (6cm) TFT Tould Scratch & solvent resistant display; 2.4" (6cm) TFT Tould Scratch & solvent resistant display; 2.4" (6cm) TFT Tould Scratch & solvent resistant display; 2.4" (6cm) TFT Tould Scratch & solvent resistant display; 2.4" (6cm) TFT Tould Scratch & solvent resistant display; 2.4" (6cm) TFT Tould Scratch & solvent resistant display; 2.4" (6cm) TFT Tould Scratch & solvent resistant display; 2.4" (6cm) TFT Tould Scratch & solvent resistant display; 2.4" (6cm) TFT Tould Scratch & solvent resistant display; 2.4" (6cm) TFT Tould Scratch & solvent resistant display; 2.4" (6cm) TFT Tould Scratch & solvent resistant display; 2.4" (6cm) TFT Tould Scratch & solvent resistant display; 2.4" (6cm) TFT Tould Scratch & solvent resistant display; 2.4" (6cm) TFT Tould Scratch & solvent resistant display; 2.4" (6cm) TFT Tould Scratch & solvent resistant display; 2.4" (6cm) TFT Tould Scratch & solvent resistant display; 2.4" (6cm) TFT Tould Scratch & solvent resistant resi				
Bright colour screen; with permanent back light Gratch & solvent resistant display; 2.4" (6cm) TFT Large positive feedback buttons USB power supply; via PC Test certificate 2 year gauge warranty* Automatic rotating display; 0°, 90°, 180° & 270° Automatic rotating; 10 Automatic gauge switch on Probe type; Ferrous (F), Non-Ferrous (N), Dual (FNF) ³ F.N. FNF F.N. FNF F.N. FNF F.N. FNF F.N. FNF F.N. FNF F.N. FNF F.N. FNF F.N. FNF F.N. FNF F.N. FNF F.N. FNF F.N. FNF F.N. FNF	• •			
Scratch & solvent resistant display; 2.4" (6cm) TFT Large positive feedback buttons USB power supply; via PC Test certificate 2 year gauge warranty* Automatic rotating display; 0°, 90°, 180° & 270° 4 utomatic rotating display; 0°, 90°, 180° & 270° 4 utomatic rotating display; 0°, 90°, 180° & 270° 4 utomatic rotating display; 0°, 90°, 180° & 270° 4 utomatic rotating display; 0°, 90°, 180° & 270° 4 utomatic rotating display; 0°, 90°, 180° & 270° 4 utomatic rotating display; 0°, 90°, 180° & 270° 4 utomatic rotating display; 0°, 90°, 180° & 270° 4 utomatic rotating display; 0°, 90°, 180° & 270° 4 utomatic rotating display; 0°, 90°, 180° & 270° 5 and the sensor, with advantatic group deviation; o 4 utomatic rotating display; 0°, 90°, 180° & 270° 5 utomatic rotating; 10 5 ut	Tough, impact, waterproof & dust resistant; equivalent to IP64			
Large positive feedback buttons ••••••••••••••••••••••••••••••••••••	Bright colour screen; with permanent back light			
USB power supply; via PC Test certificate 2 year gauge warranty* 4 4utomatic rotating display; 0°, 90°, 180° & 270° 4 5 4utomatic rotating display; 0°, 90°, 180° & 270° 4 5 5 5 5 5 5 5 5 5 5 5 5 5 5 5 5 5 5 5	Scratch & solvent resistant display; 2.4" (6cm) TFT			
Test certificate 2 year gauge warranty* 4 Automatic rotating display; 0°, 90°, 180° & 270° Automatic rotating display; 0°, 90°, 180° & 270° Emergency light Tap awake from sleep Gauge software updates'; via ElcoMaster® software Gauge software updates'; via ElcoMaster® software Data output USB; to computer, Android" & IOS* devices On screen statistics INumber of reading; η Mean (average); \bar{x} Standard deviation; $CV\%$ Elcometer index value*, E/V Nominal dry film thickness; NDFT IMO PSPC; %>NDFT, %>90 <ndft, &="" (f),="" (fnf)<sup="" (n),="" 90:10="" alarms="" audible="" automatic="" batch="" below="" cable="" case="" definable="" dual="" elcomaster®="" fail="" ferrous="" graph;="" grupe="" high="" in="" integral="" limit;="" limits;="" live="" low="" mode="" models;="" non-ferrous="" number="" of="" on="" pass="" probe="" protective="" protectors="" reading="" readings="" replaceable="" screen="" software="" switch="" tend="" type;="" usb="" visual="" with="">3 E, N, FNF E, N</ndft,>	Large positive feedback buttons			
2 year gauge warranty* Image: Construction of the sensor; with adjustable auto brightness Ambient light sensor; with adjustable auto brightness Image: Construction of the sensor; with adjustable auto brightness Tap awake from sleep Image: Construction of the sensor; with adjustable adjustable sensor; with adjustable sensor; with adjustable adjustable sensor; with adjustable sensor; with adjustable sensor; with adjustable adjustable sensor; with adjustable adjustable sensor; with adjustable sensor; with adjustable adjustable sensor; with adjustable adjustable sensor; with adjustable adjustable sensor; with adjustable sensor; with adjustable sensor; with adjustable adjustable sensor; with adjus	USB power supply; via PC			
Automatic rotating display; 0°, 90°, 180° & 270° Ambient light sensor; with adjustable auto brightness Emergency light Tap awake from sleep Gauge software updates'; via ElcoMaster® software Data output USB; to computer Bluetooth®; to computer, Android" & iOS* devices On screen statistics INumber of readings; η Mean (average); \bar{x} Standard deviation; σ Highest reading; Li Coefficient of variation; $CV\%$ Elcometer index value ² ; EIV Nominal dry film thickness; NDFT IMO PSPC; $\% \sim NDFT$, $\% > 90 < NDFT$, $90 < 10$ pass/fail High & low limit; definable autoble & visual alarms Number of readings below low limit; Live reading trend graph; in batch mode ElcoMaster® software I Replaceable screen protectors Protective case Integral models; with automatic gauge switch on Probe type; Ferrous (F), Non-Ferrous (N), Dual (FNF) ³ F, N, FNF F, F	Test certificate			
Ambient light sensor; with adjustable auto brightness • Emergency light • Tap awake from sleep • Gauge software updates ¹ ; via ElcoMaster [®] software • Data output • USB; to computer • Bluetooth [®] ; to computer, Android [™] & iOS ⁴ devices • On screen statistics • Number of readings; η • Mean (average); \overline{x} • Standard deviation; σ • Highest reading; Lo • Coefficient of variation; CV% • Elcometer index value ^a ; ElV • Nominal dry film thickness; NDFT • IMO PSPC; %>NDFT, %>90 <ndft, 90:10="" fail<="" pass="" td=""> • Mumber of readings above high limit; • Number of readings below low limit; • ILowest reading trend graph; in batch mode • ElcoMaster[®] software & USB cable • Number of readings below low limit; • Live reading trend graph; in batch mode • ElcoMaster[®] software & USB cable • Replaceable screen protectors • Probe type; Ferrous (</ndft,>	2 year gauge warranty*			
Emergency light Image: Computer of the second s	Automatic rotating display; 0°, 90°, 180° & 270°			
Tap awake from sleep Image: Software updates'; via ElcoMaster® software Image: Software updates'; via ElcoMaster® software Data output Image: Software Image: Software USB; to computer, Android [®] & iOS* devices Image: Software Discreen statistics Image: Software Number of readings; η Image: Software Mean (average); X Image: Software Standard deviation; o Image: Software Highest reading; Hi Image: Software Lowest reading; Lo Image: Software Coefficient of variation; CV% Image: Software Elcometer index value ² ; ElV Image: Software Nominal dry film thickness; NDFT Image: Software IMO PSPC; %>NDFT, %>90<-NDFT, 90:10 pass/fail	Ambient light sensor; with adjustable auto brightness			
Gauge software updates'; via ElcoMaster® software Image: Computer Data output Image: Computer USB; to computer, Android" & iOS* devices Image: Computer On screen statistics Image: Computer Number of readings; η Image: Computer Mean (average); x Image: Computer Standard deviation; σ Image: Computer Highest reading; Lo Image: Computer Coefficient of variation; CV% Image: Computer Elcometer index value ² ; ElV Image: Computer Nominal dry film thickness; NDFT Image: Computer IMO PSPC; %>NDFT, %>90 <ndft, 90:10="" fail<="" pass="" td=""> Image: Computer High & low limit; Image: Computer Number of readings above high limit; Image: Computer Number of readings below low limit; Image: Computer Live reading trend graph; in batch mode Image: Computer ElcoMaster® software & USB cable Image: Computer Protective case Image: Computer Protective case Image: Computer Protective case Image: Computer Prote type; Ferrous (F), Non-Ferrous (N), Dual (FNF)³ F.N.FNF Probe type; Ferrous (F), Non-Ferrous (N), Du</ndft,>	Emergency light			
Data outputImage: ComputerUSB; to computerImage: Computer, Android" & iOS* devicesImage: Computer, Android" & iOS* devicesOn screen statisticsImage: Computer, Android" & iOS* devicesImage: Computer, Android" & iOS* devicesOn screen statisticsImage: Computer, Android" & iOS* devicesImage: Computer, Android" & iOS* devicesNumber of readings; ηImage: Computer, Android" & iOS* devicesImage: Computer, Android" & iOS* devicesMean (average); xImage: Computer, Android" & iOS* devicesImage: Computer, Android & iOS* devicesStandard deviation; σImage: Computer, Index values, EI/VImage: Computer, Index values, EI/VCoefficient of variation; CV%Image: Computer, Index values, EI/VImage: Computer, Index values, EI/VNominal dry film thickness; NDFTImage: Computer, Index values, EI/VImage: Computer, Index values, EI/VNumber of readings above high limit,Image: Computer, Index values, EI/VImage: Computer, Index values, EI/VNumber of readings above high limit,Image: Computer, Index values, EI/VImage: Computer, Index values, EI/VNumber of readings above high limit,Image: Computer, Index values, EI/VImage: Computer, Index values, EI/VNumber of readings below low limit;Image: Computer, Index values, EI/VImage: Computer, Index values, EI/VNumber of readings below low limit;Image: Computer, Index values, EI/VImage: Computer, Index values, EI/VNumber of readings below low limit;Image: Computer, Index values, EI/VImage: Computer, Index values, EI/VLive reading trend graph; in batch modeImage:	Tap awake from sleep			
USB; to computer Image: Computer Android" & iOS* devices Bluetooth®; to computer, Android" & iOS* devices Image: Computer Android" & iOS* devices On screen statistics Image: Computer Android" & iOS* devices Number of readings; η Image: Computer Android" & iOS* devices Mean (average); x Image: Computer Android" & iOS* devices Standard deviation; σ Image: Computer Android" & iOS* devices Highest reading; Hi Image: Computer Android" & iOS* devices Lowest reading; Lo Image: Computer Android & iOS* devices Coefficient of variation; CV% Image: Computer Android & iOS* devices Elcometer index value ² ; ElV Image: Computer Android & iOS* devices Nominal dry film thickness; NDFT Image: Computer Android & iOS* devices IMO PSPC; %>NDFT, %>90 <ndft, 90:10="" fail<="" pass="" td=""> Image: Computer Android & iOS* devices Number of readings above high limit; Image: Computer Android & iOS* devices Number of readings below low limit; Image: Computer Android & iOS* devices Live reading trend graph; in batch mode Image: Computer Android & iOS* devices Plastic transit case Image: Computer Android & iOS* devices Image: Computer Android & iOS* devices Probe type; Ferrous (F), Non-Ferrous (N), Dual (FNF)³ F, N, FNF</ndft,>	Gauge software updates ¹ ; via ElcoMaster [®] software			
Bluetooth®; to computer, Android [™] & iOS ⁺ devices Image: Computer, Android [™] & iOS ⁺ devices On screen statistics Image: Computer, Android [™] & iOS ⁺ devices Number of readings; η Image: Computer, Android [™] & iOS ⁺ devices Mean (average); X Image: Computer, Android [™] & iOS ⁺ devices Standard deviation; σ Image: Computer, Android [™] & iOS ⁺ devices Highest reading; <i>Lo</i> Image: Computer, Android & iOS ⁺ devices Coefficient of variation; <i>CV%</i> Image: Computer, Index value ² ; <i>EIV</i> Elcometer index value ² ; <i>EIV</i> Image: Computer, <i>NDFT</i> Nominal dry film thickness; <i>NDFT</i> Image: Computer, <i>NoPT</i> , <i>No</i> :10 pass/fail High & low limits; <i>definable audible & visual alarms</i> Image: Computer & image: Co	Data output			
On screen statistics Image: Constraint of the statistics Number of readings; η Image: Constraint of the statistics Mean (average); x Image: Constraint of the statistics Standard deviation; σ Image: Constraint of the statistics Highest reading; Hi Image: Constraint of the statistics Lowest reading; Lo Image: Constraint of the statistics Coefficient of variation; CV% Image: Constraint of the statistics Elcometer index value²; ElV Image: Constraint of the statistics Nominal dry film thickness; NDFT Image: Constraint of the statistics IMO PSPC; %>NDFT, %>90 <ndft, 90:10="" fail<="" pass="" td=""> Image: Constraint of the statistics Number of readings above high limit; Image: Constraint of the statistics Number of readings above high limit; Image: Constraint of the statistics Number of readings below low limit; Image: Constraint of the statistics Live reading trend graph; in batch mode Image: Constraint of the statistics ElcoMaster® software & USB cable Image: Constraint of the statistic of the sta</ndft,>	USB; to computer			
Number of readings; η • Mean (average); x̄ • Standard deviation; σ • Highest reading; Hi • Lowest reading; Lo • Coefficient of variation; CV% • Elcometer index value ² ; ElV • Nominal dry film thickness; NDFT • IMO PSPC; %>NDFT, %>90 <ndft, 90:10="" fail<="" pass="" td=""> • High & low limits; definable audible & visual alarms • Number of readings above high limit; • Number of readings below low limit; • Live reading trend graph; in batch mode • ElcoMaster® software & USB cable • Protective case • • Plastic transit case • • Integral models; with automatic gauge switch on • • Probe type; Ferrous (F), Non-Ferrous (N), Dual (FNF)³ F, N, FNF F, N, FNF Separate models; with automatic probe recognition • • Probe type; Ferrous (F), Non-Ferrous (N), Dual (FNF)³ F, N, FNF F, N, FNF</ndft,>	Bluetooth [®] ; to computer, Android [™] & iOS [‡] devices			
Mean (average); xImage: Standard deviation; oImage: Standard deviation; oStandard deviation; oImage: Standard deviation; oImage: Standard deviation; oHighest reading; HiImage: Standard deviation; CV%Image: Standard deviation; CV%Lowest reading; LoImage: Standard deviation; CV%Image: Standard deviation; CV%Elcometer index value?; EIVImage: Standard deviation; NDFTImage: Standard deviation; NDFTNominal dry film thickness; NDFTImage: Standard deviation; Standa	On screen statistics			
Standard deviation; o Image: Standard deviation; o Highest reading; Hi Image: Standard deviation; CV% Lowest reading; Lo Image: Standard deviation; CV% Elcometer index value ² ; EIV Image: Standard deviation; CV% Elcometer index value ² ; EIV Image: Standard deviation; CV% Nominal dry film thickness; NDFT Image: Standard deviation; CV% IMO PSPC; %>NDFT, %>90 <ndft, 90:10="" fail<="" pass="" td=""> Image: Standard deviation; CV% High & low limits; definable audible & visual alarms Image: Standard deviation; CV% Number of readings above high limit; Image: Standard deviation; CV% Number of readings below low limit; Image: Standard deviation; CV% Live reading trend graph; in batch mode Image: Standard deviation; CV% ElcoMaster® software & USB cable Image: Standard deviation; CV% Protective case Image: Standard deviation; CV% Plastic transit case Image: Standard deviation; CV% Integral models; with automatic gauge switch on Image: Standard deviation; CV% Probe type; Ferrous (F), Non-Ferrous (N), Dual (FNF)³ F, N, FNF F, N, FNF Separate models; with automatic probe recognition Image: Standard deviation; CV% Commit Probe type; Ferrous (F), Non-Ferrous (N),</ndft,>	Number of readings; η			
Highest reading; <i>Hi</i> Image: Constraint of the second s	Mean (average); \overline{x}			
Lowest reading; LoImage: Constraint on the constraint on th	Standard deviation; σ			
Coefficient of variation; CV%Image: CV%Elcometer index value²; ElVImage: CV%Nominal dry film thickness; NDFTImage: CV%IMO PSPC; %>NDFT, %>90 <ndft, 90:10="" fail<="" pass="" td="">Image: CV%High & low limits; definable audible & visual alarmsImage: CV%Number of readings above high limit;Image: CV%Number of readings below low limit;Image: CV%Live reading trend graph; in batch modeImage: CV%ElcoMaster® software & USB cableImage: CV%Replaceable screen protectorsImage: CV%Protective caseImage: CV%Plastic transit caseImage: CV%Integral models; with automatic gauge switch onImage: CV%Probe type; Ferrous (F), Non-Ferrous (N), Dual (FNF)³F, N, FNFF, N, FNF<</ndft,>	Highest reading; <i>Hi</i>			
Elcometer index value²; EIVImage: Constraint of the second se				
Nominal dry film thickness; NDFTImage: NDFT, %>90 <ndft, 90:10="" fail<="" pass="" th="">IMO PSPC; %>NDFT, %>90<ndft, 90:10="" fail<="" pass="" td="">Image: Number of readings leadible & visual alarmsNumber of readings above high limit;Image: Number of readings below low limit;Number of readings below low limit;Image: Number of readings below low limit;Live reading trend graph; in batch modeImage: Number of readings below low limit;Live reading trend graph; in batch modeImage: Number of readings below low limit;Live reading trend graph; in batch modeImage: Number of readings below low limit;Live reading trend graph; in batch modeImage: Number of readings below low limit;Live reading trend graph; in batch modeImage: Number of readings below low limit;Live reading trend graph; in batch modeImage: Number of readings below low limit;Live reading trend graph; in batch modeImage: Number of readings below low limit;Live reading trend graph; in batch modeImage: Number of readings below low limit;Live reading trend graph; in batch modeImage: Number of readings below low limit;Live reading trend graph; in batch modeImage: Number of readings below low limit;Replaceable screen protectorsImage: Number of readings below low limit;Protective caseImage: Number of readings below low limit;Integral models; with automatic gauge switch onImage: Number of readingsProbe type; Ferrous (F), Non-Ferrous (N), Dual (FNF)3F, N, FNFProbe type; Ferrous (F), Non-Ferrous (N), Dual (FNF)3F, N, FNFProbe type; Ferrous (F), Non-Ferrous (N), Dual (FNF)3F</ndft,></ndft,>	Coefficient of variation; CV%			
IMO PSPC; %>NDFT, %>90 <ndft, 90:10="" fail<="" pass="" th="">Image: Second Sec</ndft,>	Elcometer index value ² ; EIV			
High & low limits; definable audible & visual alarmsImage: constraint of the second secon	•			
Number of readings above high limit;Image: Second Seco				
Number of readings below low limit;Image: Second secon				
Live reading trend graph; in batch modeImage: Section of the section of				
ElcoMaster® software & USB cable Image: Comparison of the comparison of th				· · ·
Replaceable screen protectorsIIProtective caseIIPlastic transit caseIIIntegral models; with automatic gauge switch onIIProbe type; Ferrous (F), Non-Ferrous (N), Dual (FNF)³F, N, FNFF, N, FNFMeasurement range0-13mm 0-500mils0-1500µm 0-60mils0-1500 0-60milsSeparate models; with automatic probe recognitionIIProbe type; Ferrous (F), Non-Ferrous (N), Dual (FNF)³F, N, FNFF, N, FNFProbe type; Ferrous (F), Non-Ferrous (N), Dual (FNF)³F, N, FNFF, N, FNF				· · ·
Protective case Image: Constraint case Image: C				
Plastic transit case Image: C	• •			
Integral models; with automatic gauge switch on Image: Comparison of the system of				
Probe type; Ferrous (F), Non-Ferrous (N), Dual (FNF) ³ F, N, FNF				
Measurement range0-13mm 0-500mils0-1500µm 0-60mils0-1500 0-60Separate models; with automatic probe recognitionImage: Compare the second s	· · · · · · · · · · · · · · · · · · ·			
Measurement range 0-500mils 0-60mils 0-60 Separate models; with automatic probe recognition Image: Compare type; Ferrous (F), Non-Ferrous (N), Dual (FNF) ³ F, N, FNF F, N, FNF F, N, FNF	Probe type; Ferrous (F), Non-Ferrous (N), Dual (FNF) ³			F, N, FNF
Probe type; Ferrous (F), Non-Ferrous (N), Dual (FNF) ³ F, N, FNF F, N, FNF F, N, FNF F, N,	Measurement range			0-1500µm 0-60mils
•• •• •• ••	Separate models; with automatic probe recognition			
	Probe type; Ferrous (F), Non-Ferrous (N), Dual (FNF) ³	F, N, FNF	F, N, FNF	F, N, FNF
	Measurement range; see page 8-11 for probe selection	0-31mm 0-1,220mils	0-31mm 0-1,220mils	0-31mm 0-1,220mils

*The Elcometer 456 is extendable within 60 days from date of purchase, free of charge, to 2 years via www.elcometer.com.

Standard D Optional

Elcometer 456 probes are covered by a 1 year warranty.

² Elcometer Index Values are used in the automotive industry to assess a coating's overall quality; USA Patent Number US7606671B2 ¹ Internet connection required ⁺ Visit www.elcometer.com/sdk to find out how to integrate Elcometer's MFi certified products to your App. ³ FNF Patent Number USA: 5886522

Coating Thickness Gauge

Elcometer 456

Product Features			Standard D (Optional
		Model B	Model S	Model T
On-screen calibration instructions	; in 30+ languages			
Multiple calibration methods	,			
Factory; resets to the factory	calibration			
2-point; for smooth and rough				
1-point; zero calibration				
Zero offset ⁴ ; for calibration ac	cording to ISO19840			
Predefined calibration & measure				
ISO, SSPC PA2, Swedish, Au	stralian			
Automatic calibration; for rapid ca	alibration			
Calibration memory type; gauge		g	gb	gb
Number of batches; with unique of	calibrations		1	2,500
Calibration memories; 3 user-pro	grammable memories			
Measurement outside calibration	warning			
Calibration lock; with optional PIN	l code unlock			
Delete last reading				
Gauge memory; number of readi	ngs	Last 5	1,500	150,000
Individual batch calibrations; sen				
Limits; user definable audible & v	· · ·			
Gauge (g) or gauge & batch s	pecific (gb) limits		g	gb
Date and time stamp				•
Review, clear & delete batches				
Batch types; <i>normal, counted ave</i>	erage, IMO PSPC			
Navsea Mode				
Batch review graph				
Copy batches and calibration set				
Alpha-numeric batch names; <i>use</i>				
Scan & auto repeat modes; with	•			
Fixed batch size mode; with batc	h linking			
Technical Specification				
Display Information	2.4" (6cm) QVGA colour TFT di	splay, 320 x 240 pixels	; ;	
Battery Type	2 x AA batteries, rechargeable l	patteries can also be u	sed	
Battery Life	approximately 24 hours of conti	nuous use at 1 reading	g per second⁵	
Gauge Dimensions (h x w x d)	141 x 73 x 37mm (5.55 x 2.87 x	(1.46")		
Gauge Weight (including batteries supplied)	Separate: 161g (5.68oz) Integral: 156g (5.50oz)			
Operating Temperature	-10 to 50°C (14 to 122°F)			
Packing List	Elcometer 456 gauge, calibration protective case (B, S, T), 1 x sc instructions, USB cable (S, T), 1 For separate gauge probe optic	reen protectors (S, T), ElcoMaster® software (2 x AA batteries, o	

Standard D Optional

⁴ Zero Offset USA Patent Number US6243661

⁵Using default settings & lithium batteries, alkaline or rechargeable batteries may differ



Integral & Separate model range

The Elcometer 456 is available in three different models. Each gauge provides the user with increasing functionality - from the entry level Elcometer 456 Model B, to the top of the range Elcometer 456 Model T.

Integral gauges are ideal for single handed operation as the wide footprint of the Bigfoot[™] internal probe provides greater stability during measurement - allowing for consistent, repeatable and accurate results.

Separate models, with their wide range of probes, provide even greater measurement flexibility. See page 8-11 for more details.

Integral Mod	del Options				С	
Coolo 4	Range: 0-1500µm (0-60mils)	Accuracy*: ±1-3%	% or ±2.5µm (±0.1r	nil)		
Scale 1	Resolution: 0.1µm: 0-100µm; 1µm	: 100-1500µm (0.01mil	: 0-5mils; 0.1mil: 5	-60mils)		
		Model B	Model S	Model T	Certificate	
Elcometer 456	Ferrous Integral	A456CFBI1	A456CFSI1	A456CFTI1	•	
Elcometer 456 Non-Ferrous Integral A456CNBI1 See separate gauges with N2 PINIP™ Probe with N2 PINIP™ Probe				See separate gauges with N2 PINIP™ Probe	•	
Elcometer 456 Dual FNF Integral A456CFNFBI1 A456CFNFSI1 A456CFNFTI1					•	
	Range: 0-5mm (0-200mils)	Accuracy*: ±1-39	% or ±20µm (±1.0n	nil)		
Scale 2 Resolution: 1µm: 0-1mm; 10µm: 1-5mm (0.1mil: 0-50mils; 1mil: 50-200mils)						
For higher resolut	tion & accuracy on thin coatings Scale 2 gauge	es can be switched to the S	cale 1 mode measure	ment performance		
		Model B	Model S	Model T	Certificate	
Elcometer 456	Ferrous Integral	A456CFBI2	See separate gauges with F2 PINIP™ Probe	See separate gauges with F2 PINIP™ Probe	•	
	Range: 0-13mm (0-500mils)	Accuracy*: ±1-39	% or ±50µm (±2.0n	nils)		
Scale 3)µm: 2-13mm (0.1mil: 0-100mils; 1mil: 100-500mils)				
		Model B	Model S	Model T	Certificate	
Elcometer 456	Ferrous Integral	A456CFBI3	See separate gauges with F3 PINIP™ Probe	See separate gauges with F3 PINIP™ Probe	•	
Separate M	odel Options				С	
		Model B	Model S	Model T	Certificate	
Elcometer 456	Ferrous Separate	A456CFBS	A456CFSS	A456CFTS	•	
	Non-Ferrous Separate	A456CNBS	A456CNSS	A456CNTS	•	
Elcometer 456	Dual FNF Separate	A456CFNFBS	A456CFNFSS	A456CFNFTS	•	
Probes are suppl	ied separately, see page 8-11 for details					



For a complete range of accessories see page 16

elcometer -

• Certificate supplied as standard.

Probe range

Elcometer 456

All Elcometer 456 probes are fully interchangeable and are available in a number of designs and scale ranges to meet your specific application.

Straight Probes Measures coatings on both flat and curved surfaces

Mini Probes Ideal for measuring coatings on edges, narrow pipes or small surface areas

Right Angle Probes

For taking readings where access is restricted

PINIP[™] Probes Plug-in probes convert a separate gauge into an integral gauge

Telescopic Probes Extending right angle probes for out of reach areas

Ultra/Scan Probes These probes are fitted with replaceable probe caps - allowing users to take individual readings or scan large surface areas without damaging the probe

Waterproof Probes Sealed for use underwater at depth, even in diving gloves

High Temperature Probes

For use on hot coated materials up to 250°C (480°F)

Anodiser Probes

Chemical resistant washable probes - ideal for the anodising environment

Armoured Probes

Probes with metal reinforced heavy duty cables, reducing the risk of cable damage

Soft Coating Probes

Large surface area probes for soft reach materials (HVCA approved)

Specialist Probes

These probes are designed for measuring on specialist substrates, such as graphite, or electroplated components

Ferrous probes measure non magnetic coatings on ferro-magnetic substrates. Elcometer 456 ferrous gauges accept any ferrous probe. Non-ferrous probes measure non conductive coatings on non-ferrous metal substrates and Elcometer 456 non-ferrous gauges accept any non-ferrous probe. Dual FNF probes measure both ferrous and non-ferrous applications with automatic substrate detection. Elcometer 456 FNF gauges accept all ferrous, non-ferrous and dual FNF probes.

Elcometer probes have a maximum operating temperature of 80°C (176°F) with the exception of separate ferrous probes 150°C (300°F) and Hi-Temperature PINIP[™]'s 250°C (480°F). The stated temperature is the substrate temperature, and the duty cycle of the probe must be reduced to ensure a minimal temperature build-up within the probe.

All Elcometer probes are supplied with a Test Certificate and a set of calibration foils appropriate to the scale range of the probe - see page 18 for further information.

Probe range

Scale 0.5: Range: 0-500µm / 0-20mils

No. of Concession, Name	No. No.	
a de la compañía de		-
	1	1

Accuracy ^a :	±1-3% or ±2.5µm	±1-3% or ±0.1mil
Range:	0-500µm	0-20mils
Resolution:	0.1µm: 0-100µm 1µm: 100-500µm	0.01mil: 0-5mils 0.1mil: 5-20mils
Certificate:	•	

	Description	Part Number	Minimum Headroom	Minimum Sample Diameter⁵
Ferrous (F)				
	Mini Probe - Straight, 45mm (1.77") long	T456CFM3A	6mm (0.24")	3mm (0.12")
	Mini Probe - 90°, 45mm (1.77") long	T456CFM3R90A	16mm (0.63")	3mm (0.12")
	Mini Probe - 45°, 45mm (1.77") long	T456CFM3R45A	18mm (0.71")	3mm (0.12")
a la seconda	Mini Probe - Straight, 150mm (5.90") long	T456CFM3C	6mm (0.24")	3mm (0.12")
	Mini Probe - 90°, 150mm (5.90") long	T456CFM3R90C	16mm (0.63")	3mm (0.12")
	Mini Probe - 90°, 300mm (11.8") long	T465CFM3R90D	16mm (0.63")	3mm (0.12")
	Mini Probe - 45°, 300mm (11.8") long	T456CFM3R45D	18mm (0.71")	3mm (0.12")
Non-Ferrou	s (N)			
	Mini Probe - Straight, 45mm (1.77") long	T456CNM3A	6mm (0.24")	4mm (0.16")
	Mini Probe - 90°, 45mm (1.77") long	T456CNM3R90A	16mm (0.63")	4mm (0.16")
	– Mini Probe - Straight,150mm (5.90") long	T456CNM3C	6mm (0.24")	4mm (0.16")
	Mini Probe - 90°, 150mm (5.90") long	T456CNM3R90C	16mm (0.63")	4mm (0.16")
	Mini Probe - 90°, 400mm (15.7") long	T456CNM3R90E	16mm (0.63")	4mm (0.16")
Non-Ferrou	s - Graphite (N)			
	Mini Probe - 90° Graphite, 45mm (1.77") long	T456CNMG3R90A	16mm (0.63")	4mm (0.16")
	Mini Probe - 90° Graphite, 150mm (5.90") long	T456CNMG3R90C	16mm (0.63")	4mm (0.16")
	Mini Probe - 90° Graphite, 400mm (15.7") long	T456CNMG3R90E	16mm (0.63")	4mm (0.16")


elcometer

a. Whichever is the greater

b. FNF (F): FNF probe in F mode FNF (N): FNF probe in N mode

figate gunnlight -- -t--- !

c. Probe length is measured from X to Y



• Certificate supplied as standard.

Elcometer 456 probes are covered by a 1 year warranty



Probe range

Elcometer 456

Scale 1: Range: 0-1500µm / 0-60mils

Accuracy ^{ae} :	±1-3% or ±2.5µm	±1-3% or ±0.1mil			
Range ^d :	•	0-60mils		A REAL	
Resolution:		0.01mil: 0-5mils 0.1mil: 5-60mils			
Certificate:	•				
	Description		Part Number	Minimum Headroom	Minimum Sample Diameter ^ь
Ferrous (F)					
	Straight Probe		T456CF1S	85mm (3.35")	4mm (0.16")
	Straight Probe, sealed		T456CF1E	85mm (3.35")	4mm (0.16")
	Ultra/Scan Probe		T456CF1U	86mm (3.38")	15mm (0.59")
	Ultra/Scan Probe, armoured cable		T456CF1UARM	29mm (1.14")	15mm (0.59")
	Right Angle Probe		T456CF1R	28mm (1.10")	4mm (0.16")
	Mini Probe - 90°, 45mm (1.77") long	J	T456CFM5R90A	16mm (0.63")	4mm (0.16")
	Mini Probe - 90°, 45mm (1.77") long	, sealed	T456CFME5R90A	16mm (0.63")	4mm (0.16")
	Mini Probe - 90°, 45mm (1.77") long	, 2m cable, sealed	T456CFME5R90A-2	16mm (0.63")	4mm (0.16")
	PINIP [™] Integral Probe		T456CF1P	170mm (6.69")	4mm (0.16")
Non-Ferrous (N)				
	Straight Probe		T456CN1S	85mm (3.35")	4mm (0.16")
	Right Angle Probe		T456CN1R	28mm (1.10")	4mm (0.16")
	Mini Probe - 90°, 45mm (1.77") long	J	T456CNM5R90A	16mm (0.63")	4mm (0.16")
	Mini Probe - 90°, 150mm (5.90") Ion	ıg	T456CNM5R90C	16mm (0.63")	4mm (0.16")
1	— Mini Probe - 90°, 400mm (15.7") lon	ıg	T456CNM5R90E	16mm (0.63")	4mm (0.16")
	Anodiser Probe		T456CN1AS	100mm (3.94")	4mm (0.16")
	PINIP [™] Integral Probe		T456CN1P	180mm (7.09")	4mm (0.16")
Ferrous & Noi	n-Ferrous (FNF)				
	Straight Probe		T456CFNF1S	88mm (3.46")	F: 4mm (0.16") N: 6mm (0.24")
	Straight Probe, armoured cable		T456CFNF1ARM	185mm (7.28")	F: 4mm (0.16") N: 6mm (0.24")
	Ultra/Scan Probe		T456CFNF1U	89mm (3.50")	15mm (0.59")
	Right Angle Probe		T456CFNF1R	38mm (1.50")	F: 4mm (0.16") N: 6mm (0.24")
	PINIP [™] Integral Probe		T456CFNF1P	180mm (7.09")	F: 4mm (0.16") N: 6mm (0.24")

a. Whichever is the greater

b. FNF (F): FNF probe in F mode FNF (N): FNF probe in N mode

• Certificate supplied as standard.

c. Probe length is measured from X to Y

d. Excluding Ultra/Scan probe end cap

e. Ultra/Scan Probe calibrated using a sample of the uncoated substrate Elcometer 456 probes are covered by a 1 year warranty

Probe range

Scale 2: Range: 0-5mm / 0-200mils

	Accuracy ^{ae} :	±1-3% or ±20µm	±1-3% or ±1.0mil	
	Range ^d :	0-5mm	0-200mils	
V	Resolution:	1μm: 0-1mm 10μm: 1-5mm	0.1mil: 0-50mils 1.0mil: 50-200mils	
	Certificate:	•		
	Certificate:	10µm: 1-5mm •	1.0mil: 50-200mils	

	Description ^c	Part Number	Minimum Headroom	Minimum Sample Diameter ^ь
Ferrous (F)				
	Straight Probe	T456CF2S	89mm (3.50")	8mm (0.32")
	Straight Probe, armoured cable	T456CF2ARM	138mm (5.43")	8mm (0.32")
	Ultra/Scan Probe	T456CF2U	90mm (3.54")	15mm (0.59")
	Right Angle Probe	T456CF2R	32mm (1.26")	8mm (0.32")
20.4	Telescopic Probe - 56 -122cm (22 - 48") long	T456CF2T	36mm (1.42")	8mm (0.32")
	Soft Coating Probe	T456CF2B	89mm (3.50")	8mm (0.32")
	Waterproof Probe, 1m (3') cable	T456CF2SW	138mm (5.43")	8mm (0.32")
	Waterproof Probe, 5m (15') cable	T456CF2SW-5	138mm (5.43")	8mm (0.32")
	Waterproof Probe, 15m (45') cable	T456CF2SW-15	138mm (5.43")	8mm (0.32")
	Waterproof Probe, 30m (98') cable	T456CF2SW-30	138mm (5.43")	8mm (0.32")
	Waterproof Probe, 50m (164') cable	T456CF2SW-50	138mm (5.43")	8mm (0.32")
	Waterproof Probe, 75m (250') cable	T456CF2SW-75	138mm (5.43")	8mm (0.32")
	PINIP [™] Integral Probe	T456CF2P	174mm (6.85")	8mm (0.32")
	Hi-Temperature PINIP [™] Probe - 250°C (480°F)	T456CF2PHT	174mm (6.85")	8mm (0.32")
Non-Ferrous (N)				
	Straight Probe	T456CN2S	88mm (3.46")	14mm (0.55")
	PINIP [™] Integral Probe	T456CN2P	185mm (7.28")	14mm (0.55")

Scale 3: Range: 0-13mm / 0-500mils

Mark Inc.

Accuracy ^a :	±1-3% or ±50µm	±1-3% or ±2.0mils
Range:	0-13mm	0-500mils
Resolution:	1μm: 0-2mm 10μm: 2-13mm	0.1mil: 0-100mils 1.0mil: 100-500mils
Certificate:	•	

	Description ^c	Part Number	Minimum Headroom	Minimum Sample Diameter ^b
Ferrous (F)				
	Straight Probe	T456CF3S	102mm (4.02")	14mm (0.55")
	PINIP [™] Integral Probe	T456CF3P	184mm (7.24")	14mm (0.55")
Non-Ferrous (N)			
NEW IMAGE	Straight Probe	T456CN3S	170mm (6.69")	35mm (1.38")

a. Whichever is the greater

- b. FNF (F): FNF probe in F mode FNF (N): FNF probe in N mode
- Certificate supplied as standard.

- c. Probe length is measured from X to Y d. Excluding Ultra/Scan probe end cap
- e. Ultra/Scan Probe calibrated using a sample of the uncoated substrate Elcometer 456 probes are covered by a 1 year warranty

```
elcometer
```



Probe range

Elcometer 456

Scale FM7: Range: 0.6-3.8mm / 25-150mils

Accuracy ^a :	±7.5% or ±114µm	±7.5% or ±4.5mils	
Range ^f :	0.60-3.8mm	25-150mils	
Resolution:	1μm: 0-1mm 10μm: 1-3.8mm	0.1mil: 0-139.3mils 1.0mil: 39.4-150mils	1 million
Certificate:	•		

	Description°	Part Number	Minimum Headroom	Minimum Sample Diameter ^ь
Ferrous (F)				
	Mini Probe - 45°, 45mm (1.77") long	T456CFM7R45A	20mm (0.79")	6.5 mm (0.26")

Scale 6: Range: F: 0-25mm / 0-980mils N: 0-30mm/ 0-1220mils

Resolution: 10μm: 0-2mm 1mil: 0-100mils 100μm: 2-30mm 10mils: 100-1200mils	
Resolution: 10um: 0-2mm 1mil: 0-100mils	
Range: F: 0-25mm N: 0-30mm F: 0-980mils N: 0-1200mils	
Accuracy ^a : ±1-3% or ±100μm ±1-3% or ±4.0mils	All and a second s

	Description	Part Number	Minimum Headroom	Minimum Sample Diameter ^ь
Ferrous (F)				
	Straight Probe	T456CF6S	150mm (5.90")	51 x 51mm ² (2 x 2 inch ²)
	Straight Probe, armoured cable	T456CF6ARM	190mm (7.48")	51 x 51mm ² (2 x 2 inch ²)
Non-Ferrous	5 (N)			
	Straight Probe	T456CN6S	160mm (6.30")	58mm (2.29")
	Straight Probe, armoured cable	T456CN6ARM	200mm (7.87")	58mm (2.29")

Scale 7: Range: 0-31mm / 0-1220mils

Accuracy ^a :	±1-3% or ±100µm	±1-3% or ±4.0mils			
Range:	0-31mm	0-1220mils			and the state
Resolution:	10µm: 0-2mm 100µm: 2-31mm	1.0mil: 0-100mils 10mils:100-1220mils			
Certificate:	•				
	Description		Part Number	Minimum Headroom	Minimum Sample Diameter⁵
Ferrous (F)					
	Straight Probe, armoured cable		T456CF7ARM	200mm (7.87")	55 x 55mm ² (2.17 x 2.17 inch ²)
a. Whichever is the greater b. FNF (F): FNF probe in F mode FNF (N): FNF probe in N mode			c. Probe length is meas f. For Elcometer 456 M		
 Certificate supplied as standard. 			Elcometer 456 probes a	are covered by a 1 year	warranty

• Certificate supplied as standard.



Accessories

Jumbo Hand Grip

Ideal for precision placement for the most accurate results on flat and curved surfaces. Place the probe inside the Jumbo Hand Grip and take measurements - ideal when wearing gloves. Suitable for any Elcometer 456 Scale 1 or Scale 2 straight probes.

V-Probe Adaptor

Ideal for precision placement for the most accurate results on medium and large diameter curved surfaces such as pipes and cylinders. Suitable for any Elcometer 456 Scale 1 or Scale 2 straight probes.

F and N Probes	Dual FNF Probes	
T9997766-	T99913225	Jumbo Hand Grip
T9997381-	T99913133	V-Probe Adaptor

Ultra/Scan Probe Replacement End Caps

Highly durable - when tested on smooth surfaces probe end caps have been scanned in excess of 50km (30 miles) - each end cap snaps on to the end of the Ultra/Scan probe significantly enhancing the lifetime of the probe.

F & Dual FNF Probes

T456C23956Replacement Ultra/Scan Probe End Caps (3 per pack)

Probe Placement Jig

The Elcometer probe placement jig is the ideal accessory for measuring coatings on small or complex components when the highest levels of repeatability and accuracy are required.

T95012880	Probe Placement Jig
Each probe placement to suit Scale 1 or Scale	jig is supplied with a probe housing and a component holder 2 straight probes.
T95013028	Component Hand Vice
T05040000	Cable Deleges Assembly, ideal far remate many more ante

100010020	
T95012888	Cable Release Assembly - ideal for remote measurements
T95015961	Dual FNF Probe Housing Adaptor
T95016896	Mini Probe Housing Adaptor



Calibration Foils/ Coated Standards/ Zero Test Plates

Elcometer offers a range of individual precision foils, foil sets, coated thickness standards and zero test plates to ensure the greatest possible accuracy.

See page 18 for more details.

Accessories	
T99922341	Self Adhesive Screen Protectors (x10)
T99921325	USB Cable
T45622371	Benchtop Inspection Stand - for Separate Gauges





Accessories

Elcometer 456

Data Output Controller

Enables data to be output from the Elcometer 456 via RS232 ports for the purposes of controlling automated production lines.

The Elcometer Software Support Team, or users can produce their own customised software to utilise the data output from the Elcometer 456 gauge in order to remotely trigger pass/fail criteria for their processes.



Part Number	Description
T99925387	Elcometer Data Output Controller
Operating Temperature	0 to 50°C (32°F to 122°F)
Data Input	USB
Data Output	One RS232 serial output via 9 way D-Type connector
Power Supply	Requires 5V 1A(min) DC supply via mini USB. External plug-in mains adapter with interchangeable UK/EU/US/AUS pins supplied.
Packing List	Elcometer Data Output Controller, USB to RS232 converter lead, power supply (with 4 sets of interchangeable pins)

Data Output Controller

The Elcometer 456 coating thickness gauge probe is attached to a robot arm, to automatically measure dry film thickness on the production line.

The Elcometer 456 connects to the data output controller to transfer live dry film thickness readings via RS232 ports to the automated production line.

Customised software for the data output controller can be produced, using high/low limits to trigger a pass or fail on the automated production line, helping to improve quality.







Calibration Foils Sets

The Elcometer 990 Calibration Foils are ideal for use in the laboratory, on the production line or on site. Calibration foils or 'shims' are the most convenient way of creating a coating thickness standard on the substrate material, surface finish or form. This is the ideal method for adjusting the calibration of the coating thickness gauge to ensure the greatest possible accuracy.

Features:

- · Metric and Imperial values displayed on each foil
- Available individually or in foil sets
- Precision foils with ±1% accuracy
- · Each foil has a unique serial number for traceability
- Available in thicknesses from 12.5µm to 20mm (0.5 to 790mils)

Technical Specification	1			С
Description	Foil Values (µm)	Foil Values (mils)	Un-Certified	Certified
Scale 1 Foil Set; 0-1500µm (0-60mils)	25, 50, 125, 250, 500, 1000	1.0, 2.0, 5.0, 10, 20, 40	T99022255-1	T99022255-1C
Scale 2 Foil Set; 0-5mm (0-200mils)	25, 50, 125, 250, 500, 1000, 2000, 3000	1.0, 2.0, 5.0, 10, 20, 40, 80, 120	T99022255-2	T99022255-2C
Scale 3 Foil Set; 0-13mm (0-500mils)	250, 500, 1000, 2000, 4000, 8000	10, 20, 40, 80, 160, 315	T99022255-3	T99022255-3C
Scale 4 Foil Set; 0-250µm (0-10mils)	12.5, 25, 50, 125, 250	0.5, 1.0, 2.0, 5.0, 10	T99022255-4	T99022255-4C
Scale 5 Foil Set; 0-500µm (0-20mils)	12.5, 25, 50, 125, 250, 500	0.5, 1.0, 2.0, 5.0, 10, 20	T99022255-5	T99022255-5C
Scale 6 Foil Set; 0-30mm (0-1200mils)	1000, 2000, 5000, 9500, 15mm, 25mm	40, 80, 200, 375, 590, 980	T99022255-6	T99022255-6C
Scale M3 Foil Set; 0-500µm (0-20mils)	12.5, 25, 50, 125, 250, 500	0.5, 1.0, 2.0, 5.0, 10, 20	T99022255-7	T99022255-7C
Scale 2B Foil Set ¹ ; 0-5mm (0-200mils)	25, 50, 125, 250, 500, 1000, 2000, 2000	1.0, 2.0, 5.0, 10, 20, 40, 80, 80	T99022255-8	T99022255-8C


Using calibration foils



Each foil has been independently measured at the centre point. For the greatest accuracy, place the probe in the centre of the foil.

Up to 4 foils can be combined to create a wider range of thickness values.

– elcometer -

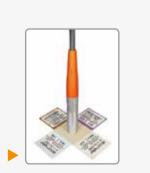

¹The Scale 2B foil sets are designed for soft coating probes and have a larger foil surface area

Coated Thickness Standards

The Elcometer 995 Coated Thickness Standards are hard wearing, durable and are mounted in a protective folder. They provide the user with an ideal method to accurately measure the performance of the coating thickness gauge.

Features:

- ±2% accuracy, supplied with Calibration Certificate as standard
- Available with Ferrous (F), Non-Ferrous (N) or Ferrous & Non-Ferrous substrates
- · Each standard is individually serial numbered for traceability
- Can be re-certified by Elcometer to meet ISO requirements
- Standards available in a range of thicknesses
- Special thicknesses can be supplied to meet specific needs
- Coated with a hard wearing film for extended life span







С

Technical Specification

Ferrous				
Part Number	Description	Values (µm)*	Values (mils)*	Certificate
T995-05F	Ferrous Coated Thickness Standards - Scale 0.5F	Zero, 40, 75, 125, 250, 500	Zero, 1.6, 3.0, 5.0, 10, 20	•
T995-1F	Ferrous Coated Thickness Standards - Scale 1F	Zero, 75, 250, 500, 1000, 1500	Zero, 3.0, 10, 20, 40, 60	•
T995-2F	Ferrous Coated Thickness Standards - Scale 2F	Zero, 250, 500, 1500, 3000, 5000	Zero, 10, 20, 60, 120, 200	•
Non Ferrous				
Part Number	Description	Values (µm)*	Values (mils)*	Certificate
T995-05N	Non-Ferrous Coated Thickness Standards - Scale 0.5N	Zero, 40, 75, 125, 250, 500	Zero, 1.6, 3.0, 5.0, 10, 20	•
T995-1N	Non-Ferrous Coated Thickness Standards - Scale 1N	Zero, 75, 250, 500, 1000, 1500	Zero, 3.0, 10, 20, 40, 60	•
T995-2N	Non-Ferrous Coated Thickness Standards - Scale 2N	Zero, 250, 500, 1500, 3000, 5000	Zero, 10, 20, 60, 120, 200	•
Ferrous / Non-	-Ferrous			
Part Number	Description	Values (µm)*	Values (mils)*	Certificate
T995-05FN	Ferrous/Non-Ferrous Coated Thickness Standards - Scale 0.5FN	F: Zero, 125, 250 N: Zero, 125, 250	F: Zero, 5, 10 N: Zero, 5, 10	•

* Nominal values. Actual coated thickness standard values may vary but are accurately labelled.

• Calibration Certificate supplied as standard.

Dry Film Thickness - Foils & Standards

Elcometer 990



Zero Test Plates

Elcometer provides a range of Zero Test Plates. When used in conjunction with a set of foils, Test Plates are ideal to test a coating thickness gauge's functionality and calibration, ideal for when it may be difficult or impractical to obtain an uncoated substrate.

For a list of standards, foils and foil sets, (see page 18).

Technical Specification					С
Description	Size	Size	Ferrous	Non-Ferrous	Certificate
Precision Zero Test Plate (±1%)	50.8 x 25.4mm	2.0 x 1.0"	T9994910-	T9994911-	
Zero Test Plate	76.2 x 50.8mm	3.0 x 2.0"	T9999529-	T9999530-	
Zero Test Plate (large)	76.2 x 101.6mm	3.0 x 4.0"	T9994054-	T9994055-	0
Steel (F) Checkpiece*	50.8 x 88.9mm	2.0 x 3.5"	T99916925	-	
Aluminium (N) Checkpiece*	50.8 x 88.9mm	2.0 x 3.5"	-	T99916901	

* To be used only with the Elcometer 311 or Elcometer 415

Optional Calibration Certificate available.

Data Management Software

Total Quality Assurance



Professional inspection reports provide a competitive advantage in today's industrial environment.

The new ElcoMaster[®] is a fast, easy to use software solution for all your reporting requirements.



ElcoMaster[®] gives you the power to review your data and produce professional reports quickly and easily. Internal wizards guide you through each step, from connecting a gauge to generating a report.

Features:

- Produce and combine measurements from any Elcometer inspection gauge in one report
- Add photographs, limits & notes to your reports
- Export to Excel or other spreadsheet formats
- Print, email or generate .pdf reports
- Design your own reports and drag & drop readings or statistics onto the report
- Combine multiple batches into one report
- Communicate and link with ElcoMaster[®] Mobile
- Automatic upgrade notifications inform and allow users to upgrade their Elcometer gauges & ElcoMaster[®] software in the field

ElcoMaster[®] Mobile for iPhone and Android[™] allows users to:

- Transfer live readings or batches from Elcometer Bluetooth[®] gauges to mobile phones, tablets or PC's
- Collect data via collection image templates, identifying where each reading should be taken¹
- Provides instant data analysis remotely and emails key data, including readings, notes & photographs, etc. - generating .pdf reports² from the field to the office

For more information please visit our website at elcometer.com.



ENGLAND

Elcometer Limited Manchester M43 6BU Tel: +44 (0)161 371 6000 Fax: +44 (0)161 371 6010 sales@elcometer.com www.elcometer.com

BELGIUM

Elcometer SA Tel: +32 (0)4 379 96 10 Fax: +32 (0)4 374 06 03 be_info@elcometer.com www.elcometer.be

FRANCE

Elcometer Sarl Tel: +33 (0)2 38 86 33 44 Fax: +33 (0)2 38 91 37 66 fr_info@elcometer.com www.elcometer.fr

GERMANY

Elcometer Instruments GmbH Tel: +49(0)7361 52806 0 Fax: +49(0)7361 52806 77 de_info@elcometer.com www.elcometer.de

THE NETHERLANDS

Elcometer NL Tel: +31 (0)30 259 1818 Fax: +31 (0)30 210 6666 nl_info@elcometer.com www.elcometer.nl

JAPAN

Elcometer KK Tel: +81-(0)3-6869-0770 Fax: +81-(0)3-6433-1220 jp_info@elcometer.com www.elcometer.jp

REPUBLIC OF SINGAPORE

Elcometer (Asia) Pte Ltd Tel: +65 6462 2822 Fax: +65 6462 2860 asia@elcometer.com www.elcometer.com.sg

UNITED ARAB EMIRATES

EL Inspection & Blasting Equipment LLC Tel: +971 4 295 0191 Fax: +971 4 295 0192 uae_sales@elcometer.com www.elcometer.ae

USA

MICHIGAN Elcometer Inc Tel: +1 248 650 0500 Toll Free: 800 521 0635 Fax: +1 248 650 0501 inc@elcometer.com www.elcometer.com

TEXAS

Elcometer of Houston Tel: +1 713 450 0631 Toll Free: 800 521 0635 Fax: +1 713 450 0632 inc@elcometer.com www.elcometer.com



elcometer.be • elcometer.fr • elcometer.de • elcometer.nl elcometer.jp • elcometer.ae • elcometer.com.sg

Elcometer 456 Models S & T: Made for iPhone 6 Plus, iPhone 6, iPhone 5c, iPhone 5c, iPhone 4, iPhone 4, iPhone 4, iPad Air 2, iPad mini 3, iPad Air, iPad mini 2, iPad (3rd and 4th generation), iPad mini, iPad 2, and iPod touch (4th and 5th generation). "Made for iPod," "Made for iPhone," and "Made for iPad" mean that an electronic accessory has been designed to connect specifically to IPod, ero, iPad, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod, iPhone, or iPad may affect wireless performance. iPad, iPhone, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a trademark of Apple Inc., registered in the U.S. and other countries. Suitable for mobile devices running Antoid' software version 2.1 and upwards. Android" and Google Play are trademarks of Google Inc. Elcometer and ElcoMaster are registered trademarks of Elcometer Limited. All other trademarks are acknowledged.

Due to our policy of continuous improvement, Elcometer Limited reserves the right to change specifications without notice.

© Elcometer Limited, 2017. All rights reserved. No part of this document may be reproduced, transmitted, stored (in a retrieval system or otherwise), or translated into any language, in any form, or by any means, without the prior written permission of Elcometer Limited.